



Mounting

Elverdal A/S ©




Elverdal

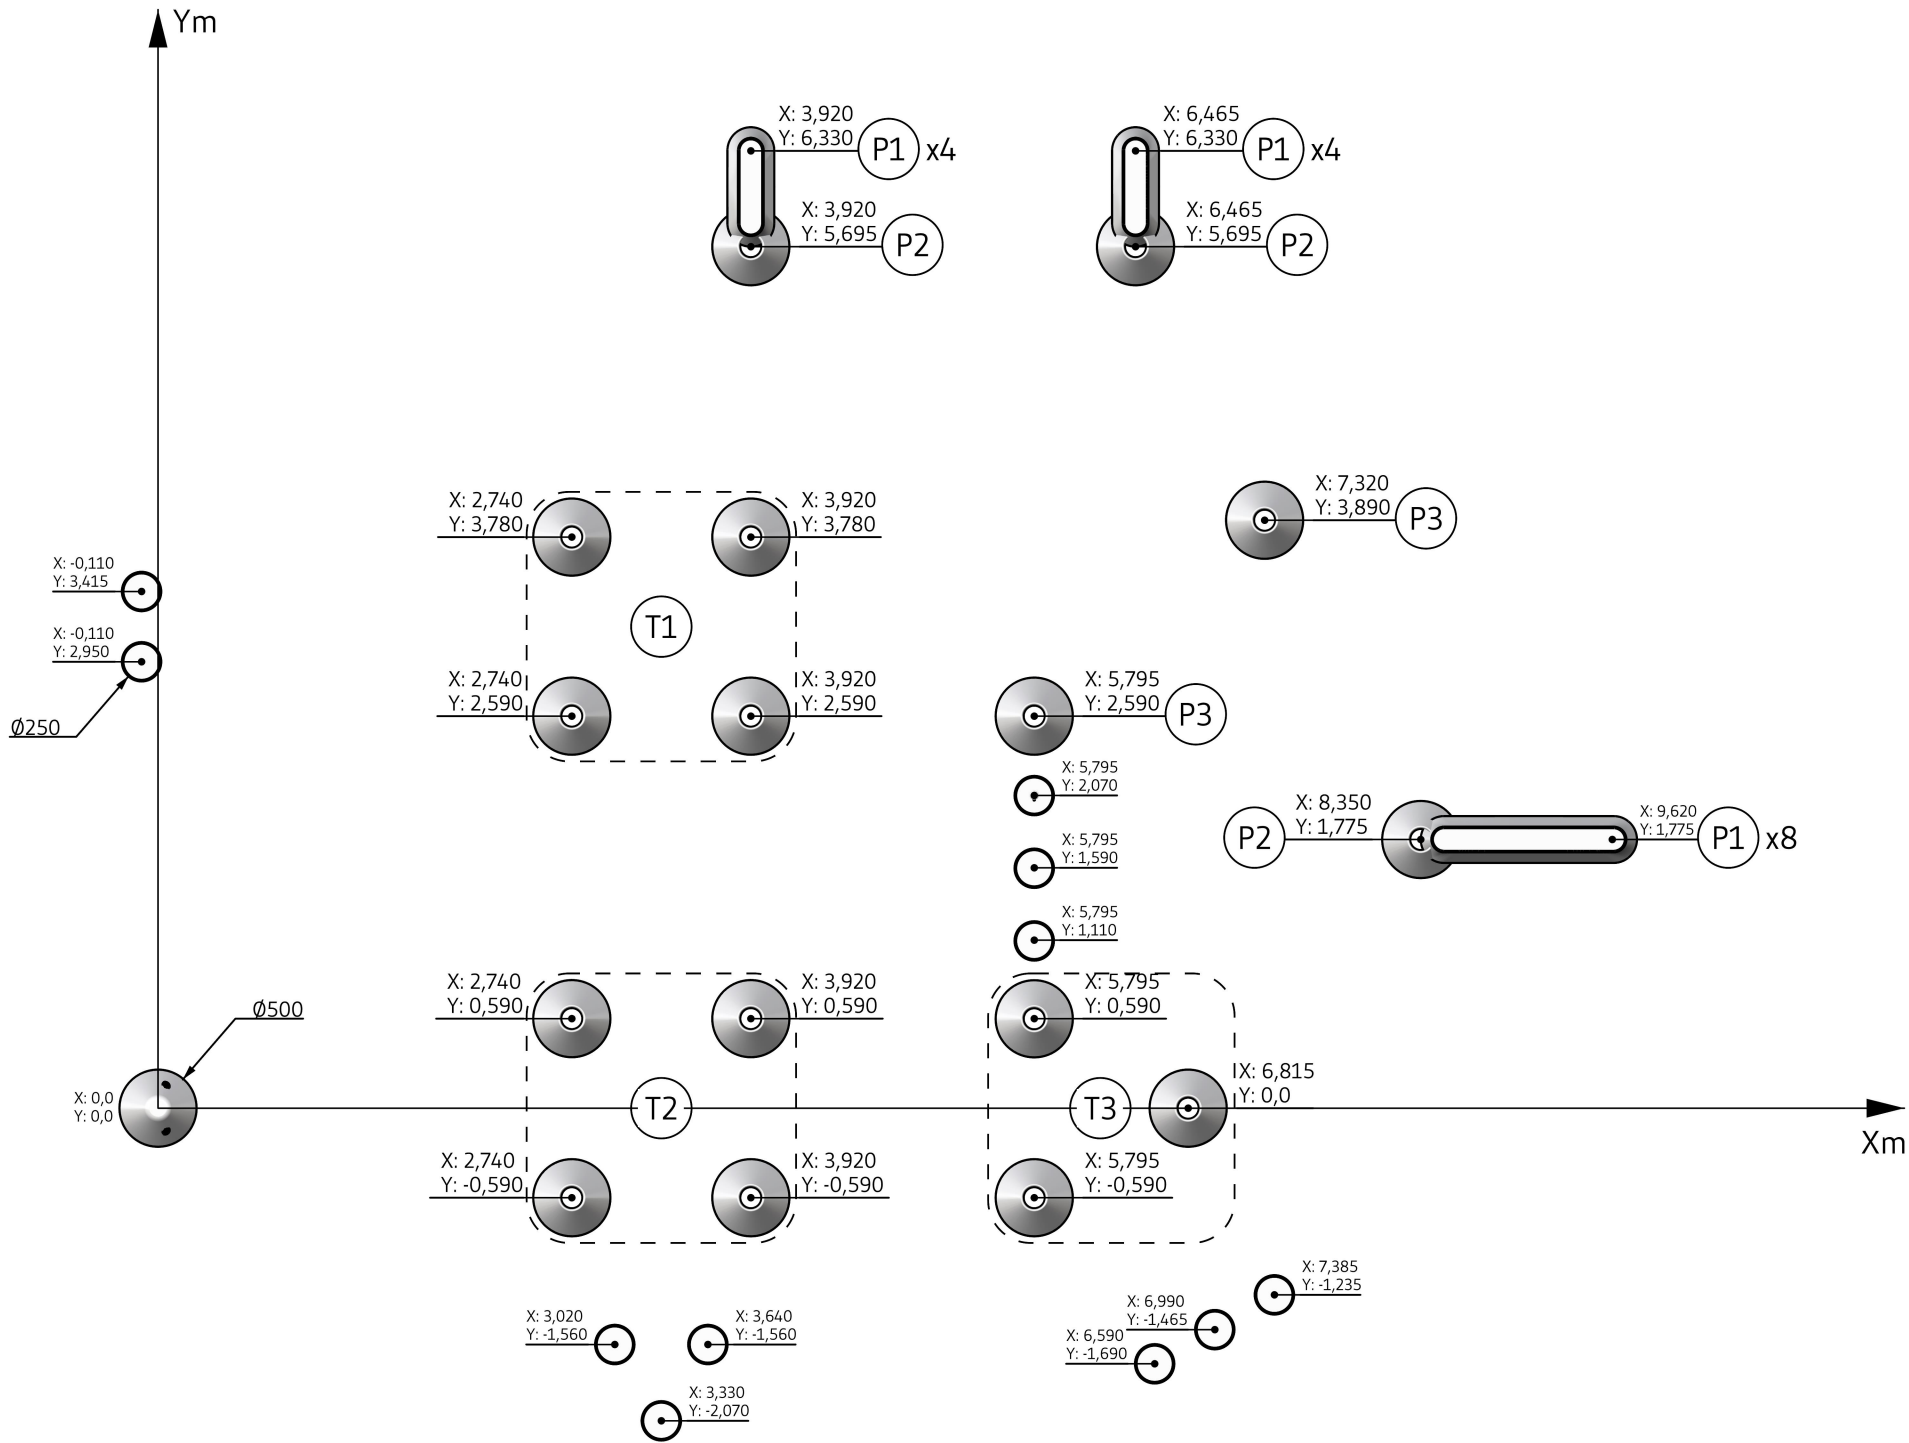

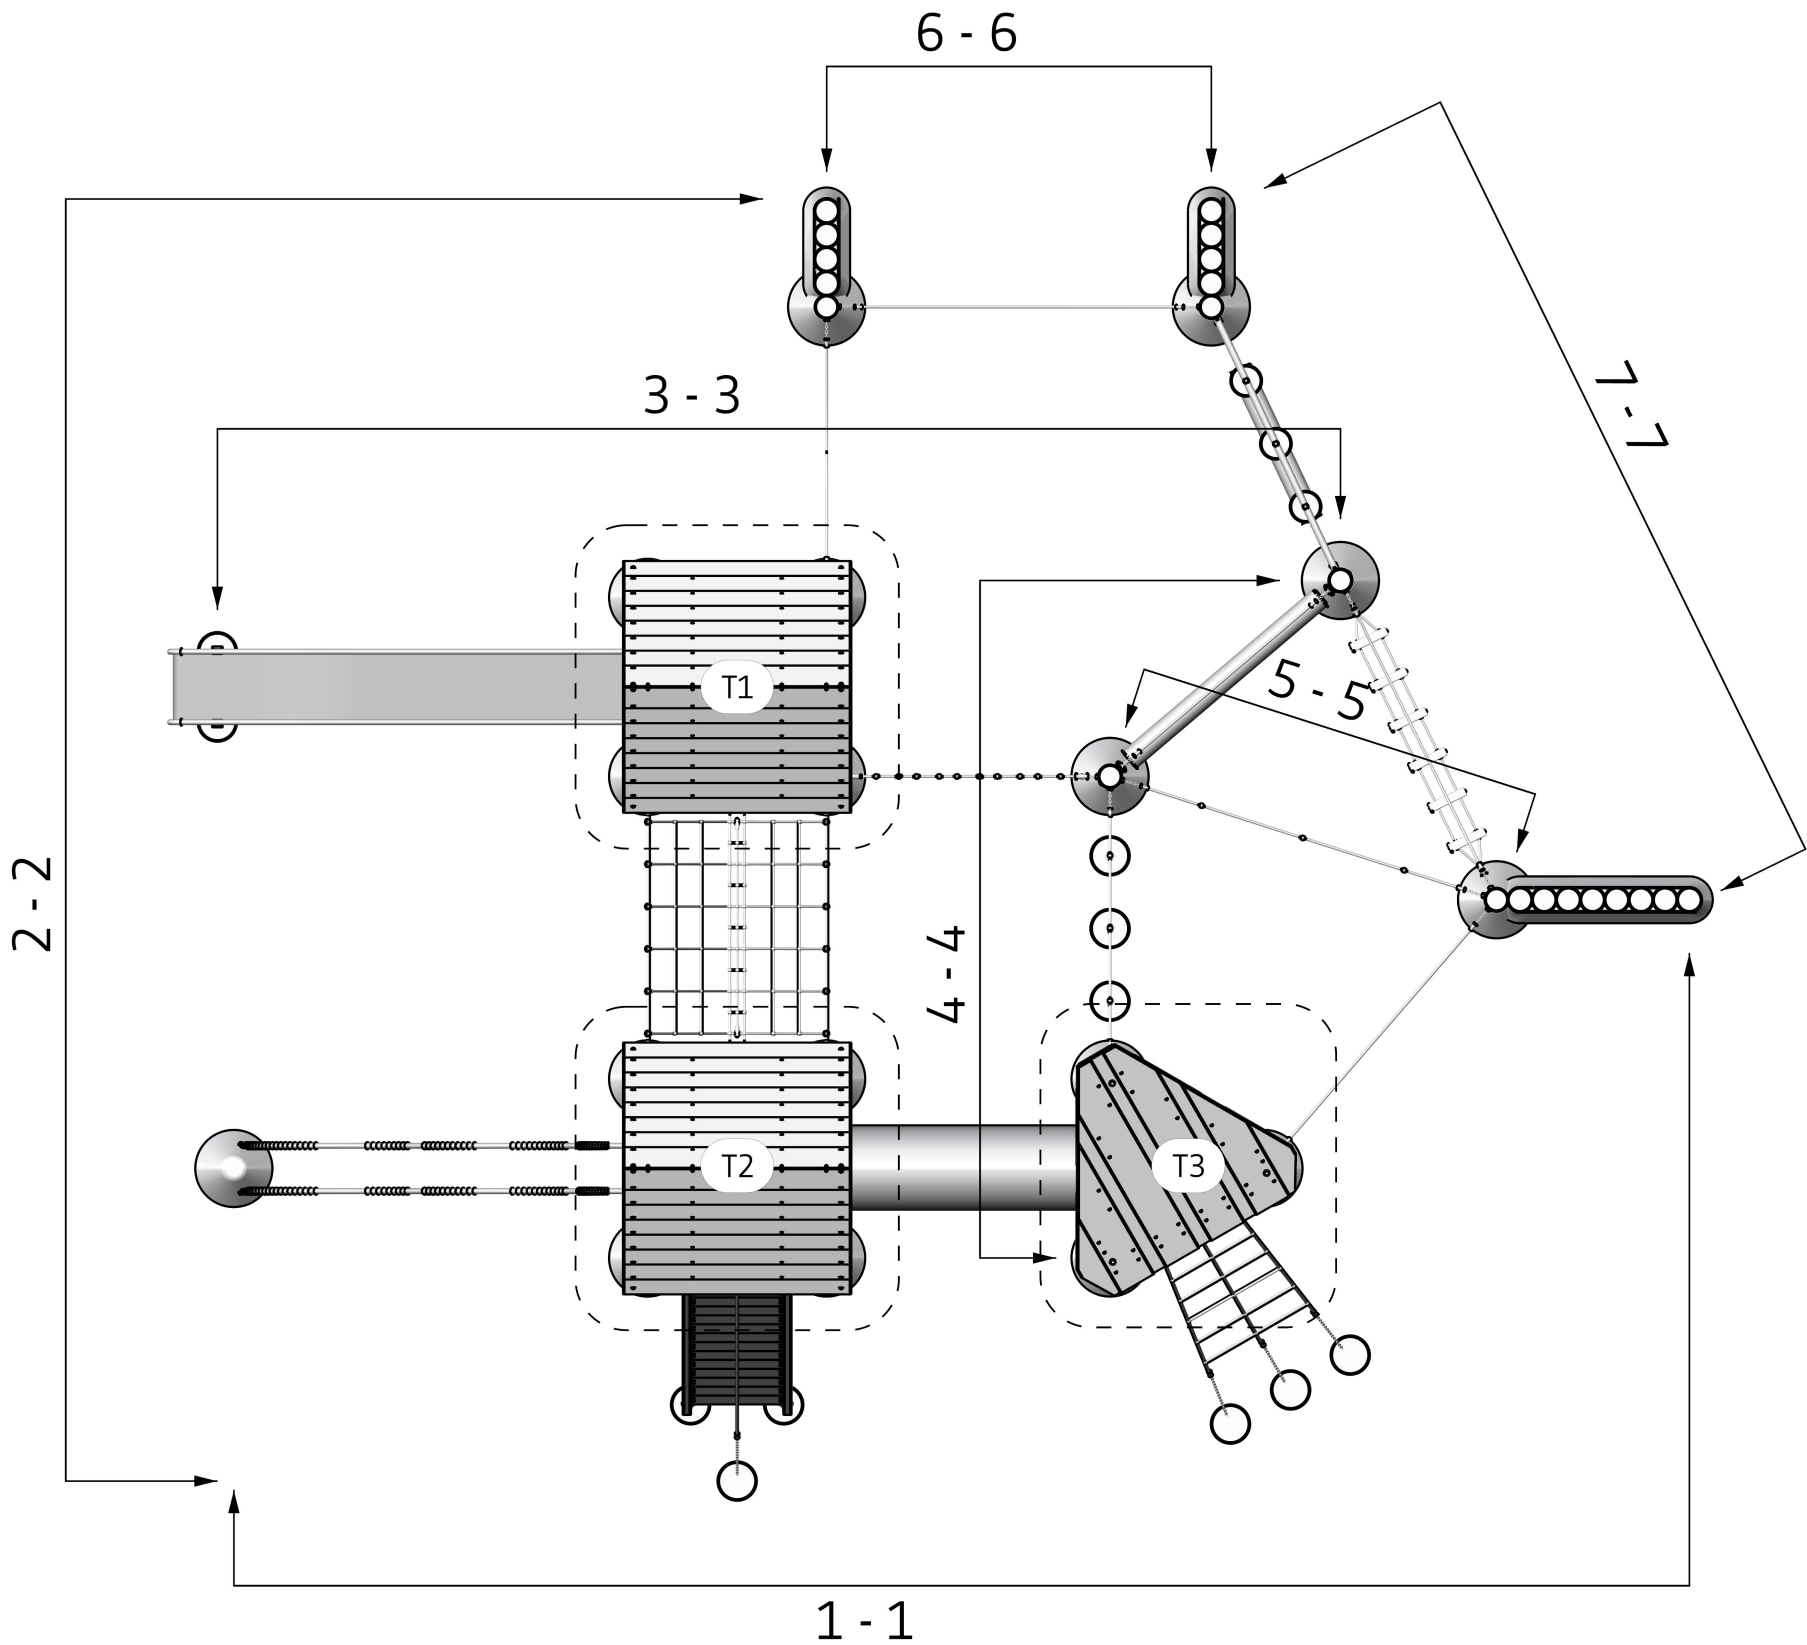




T1

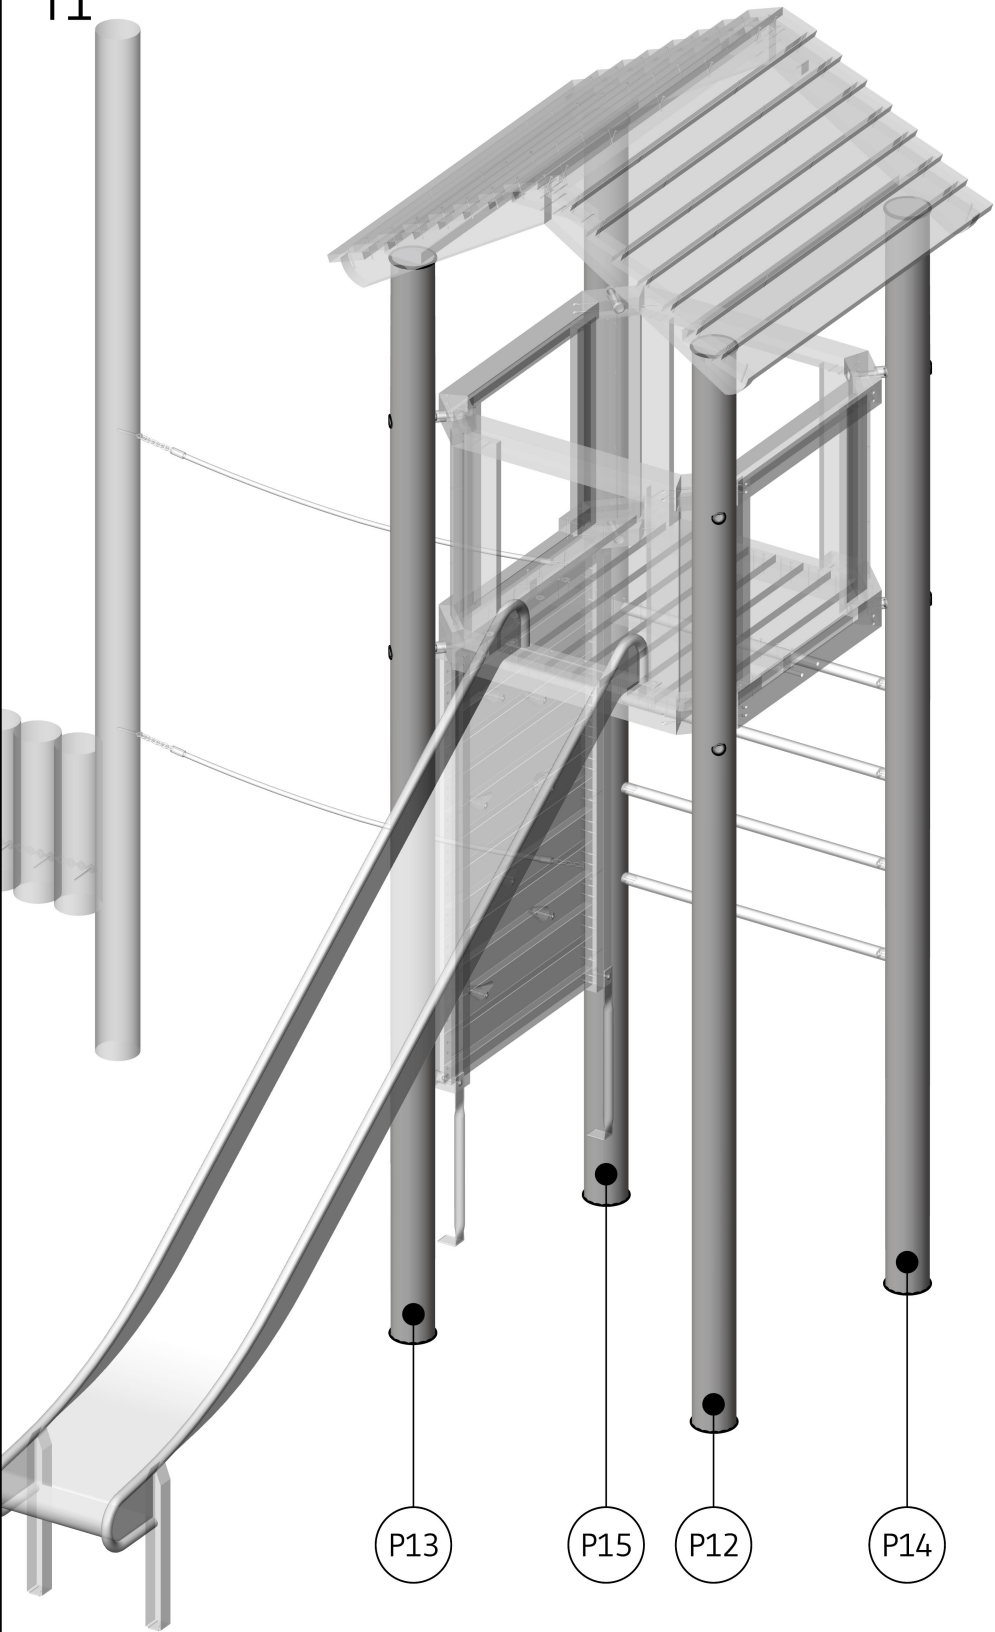

T2

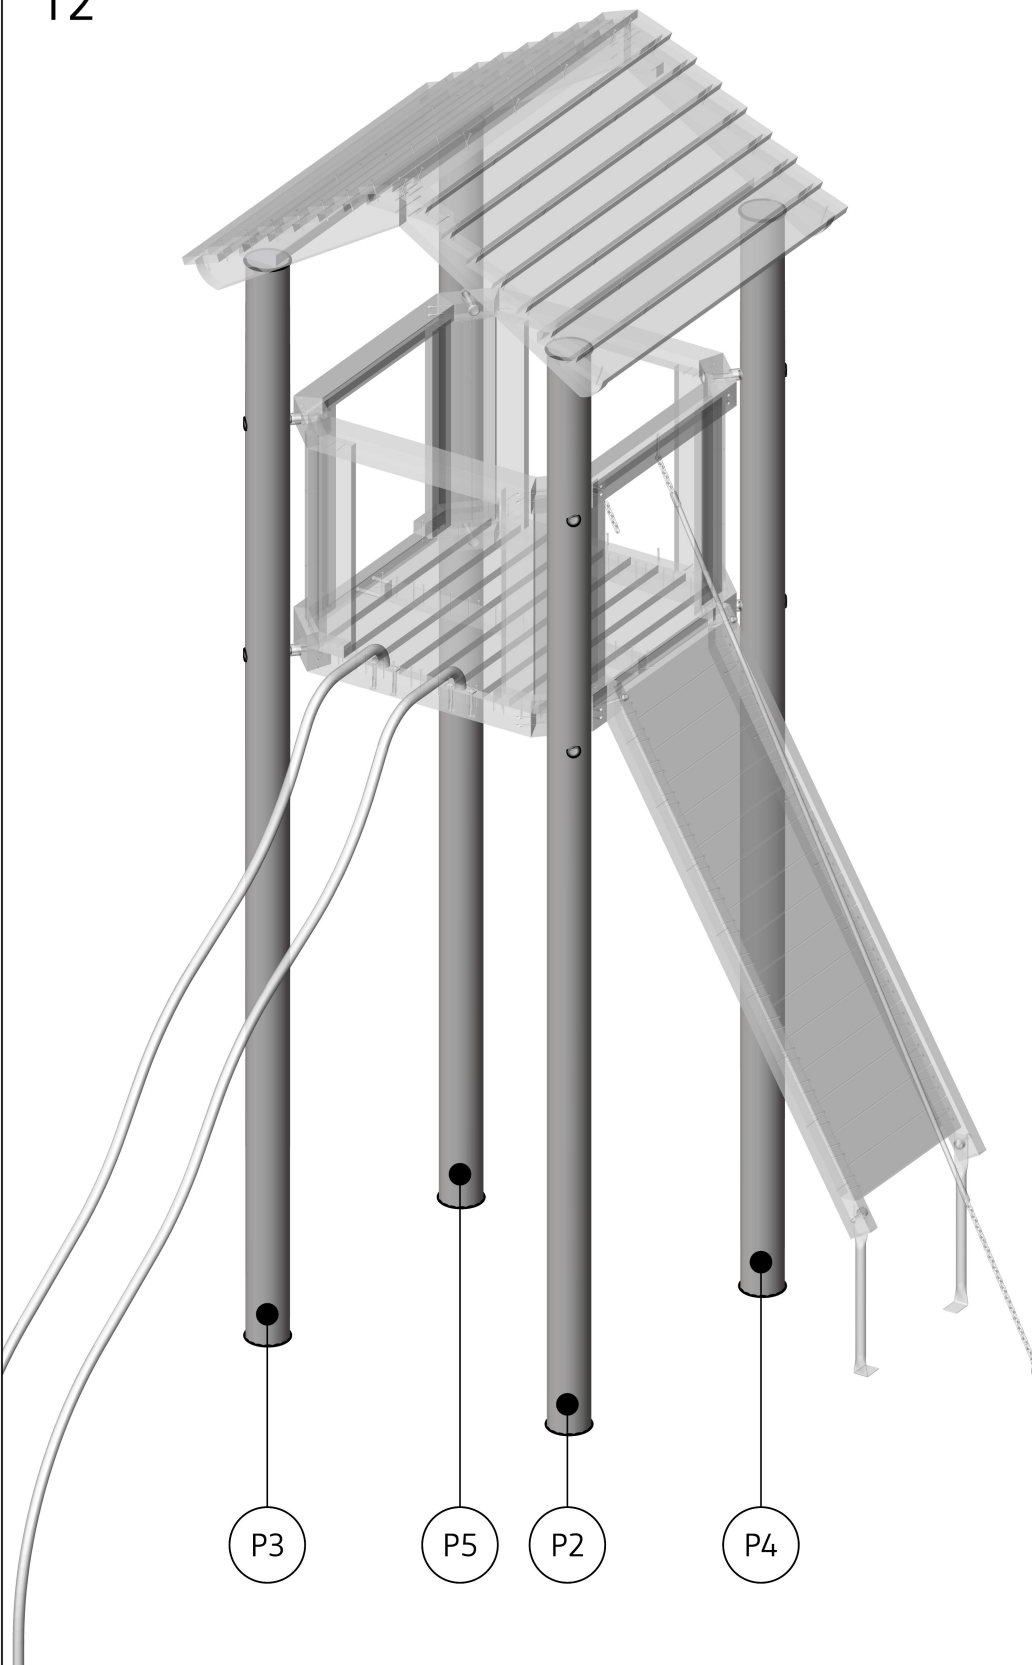


T3






1 - 1

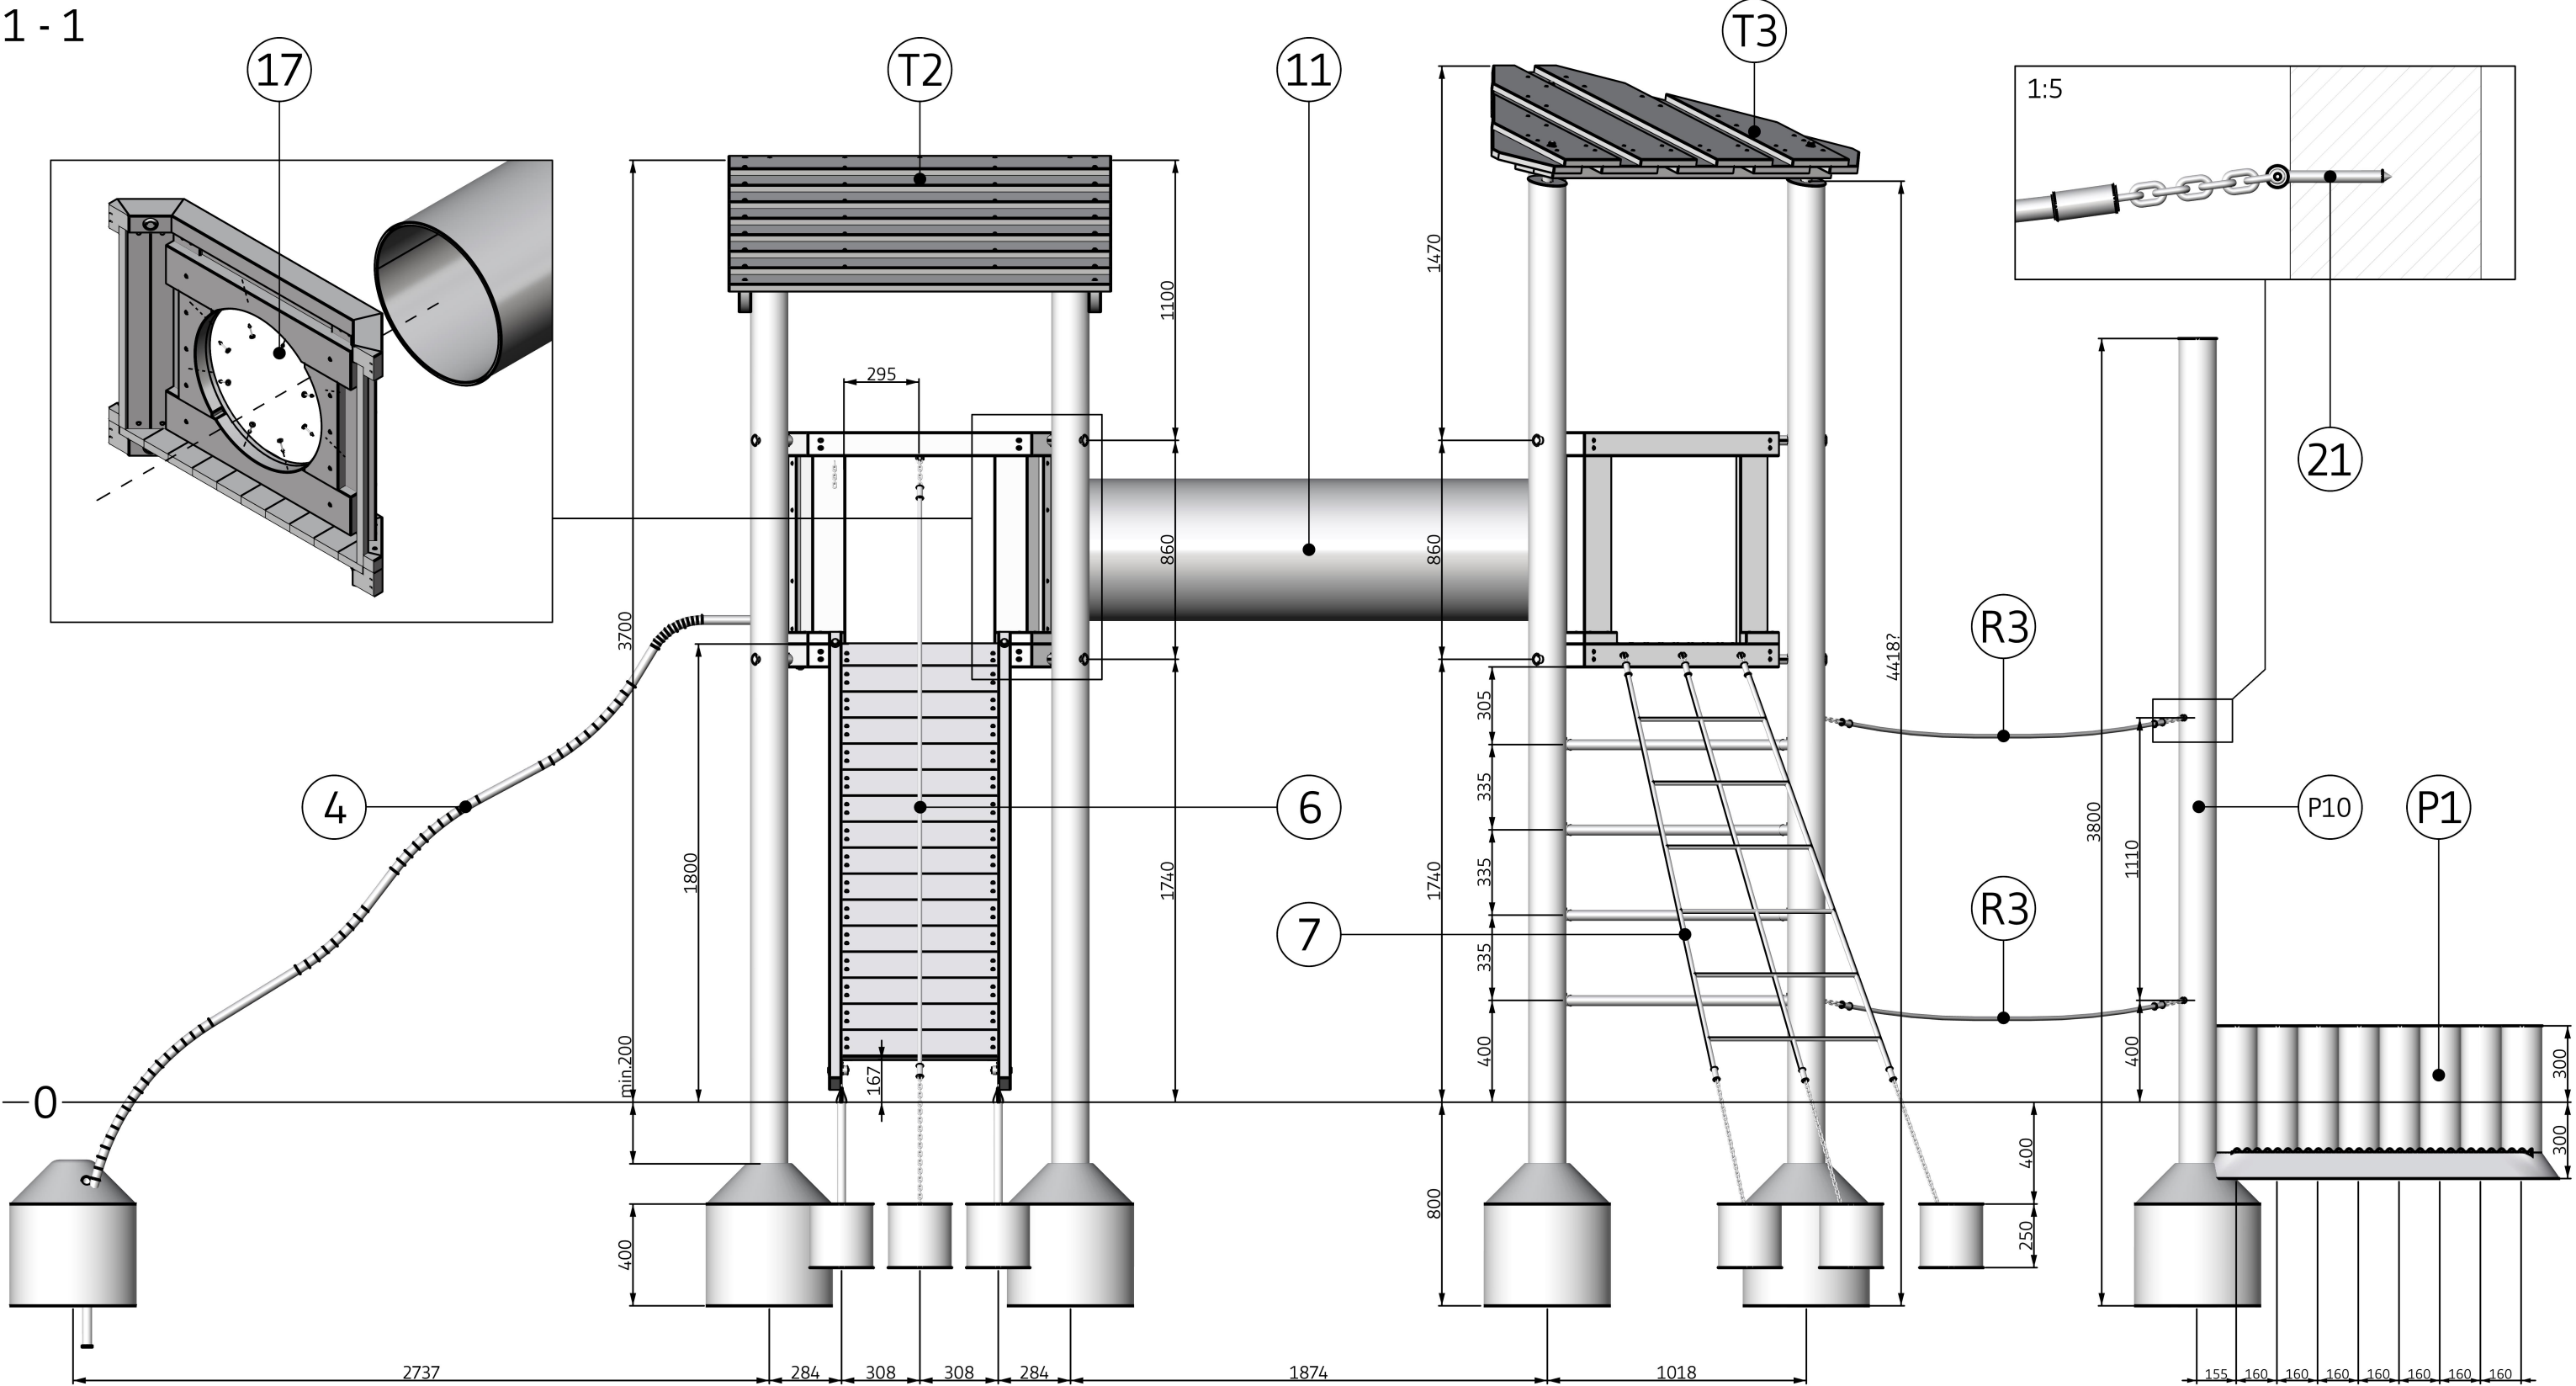




2 - 2

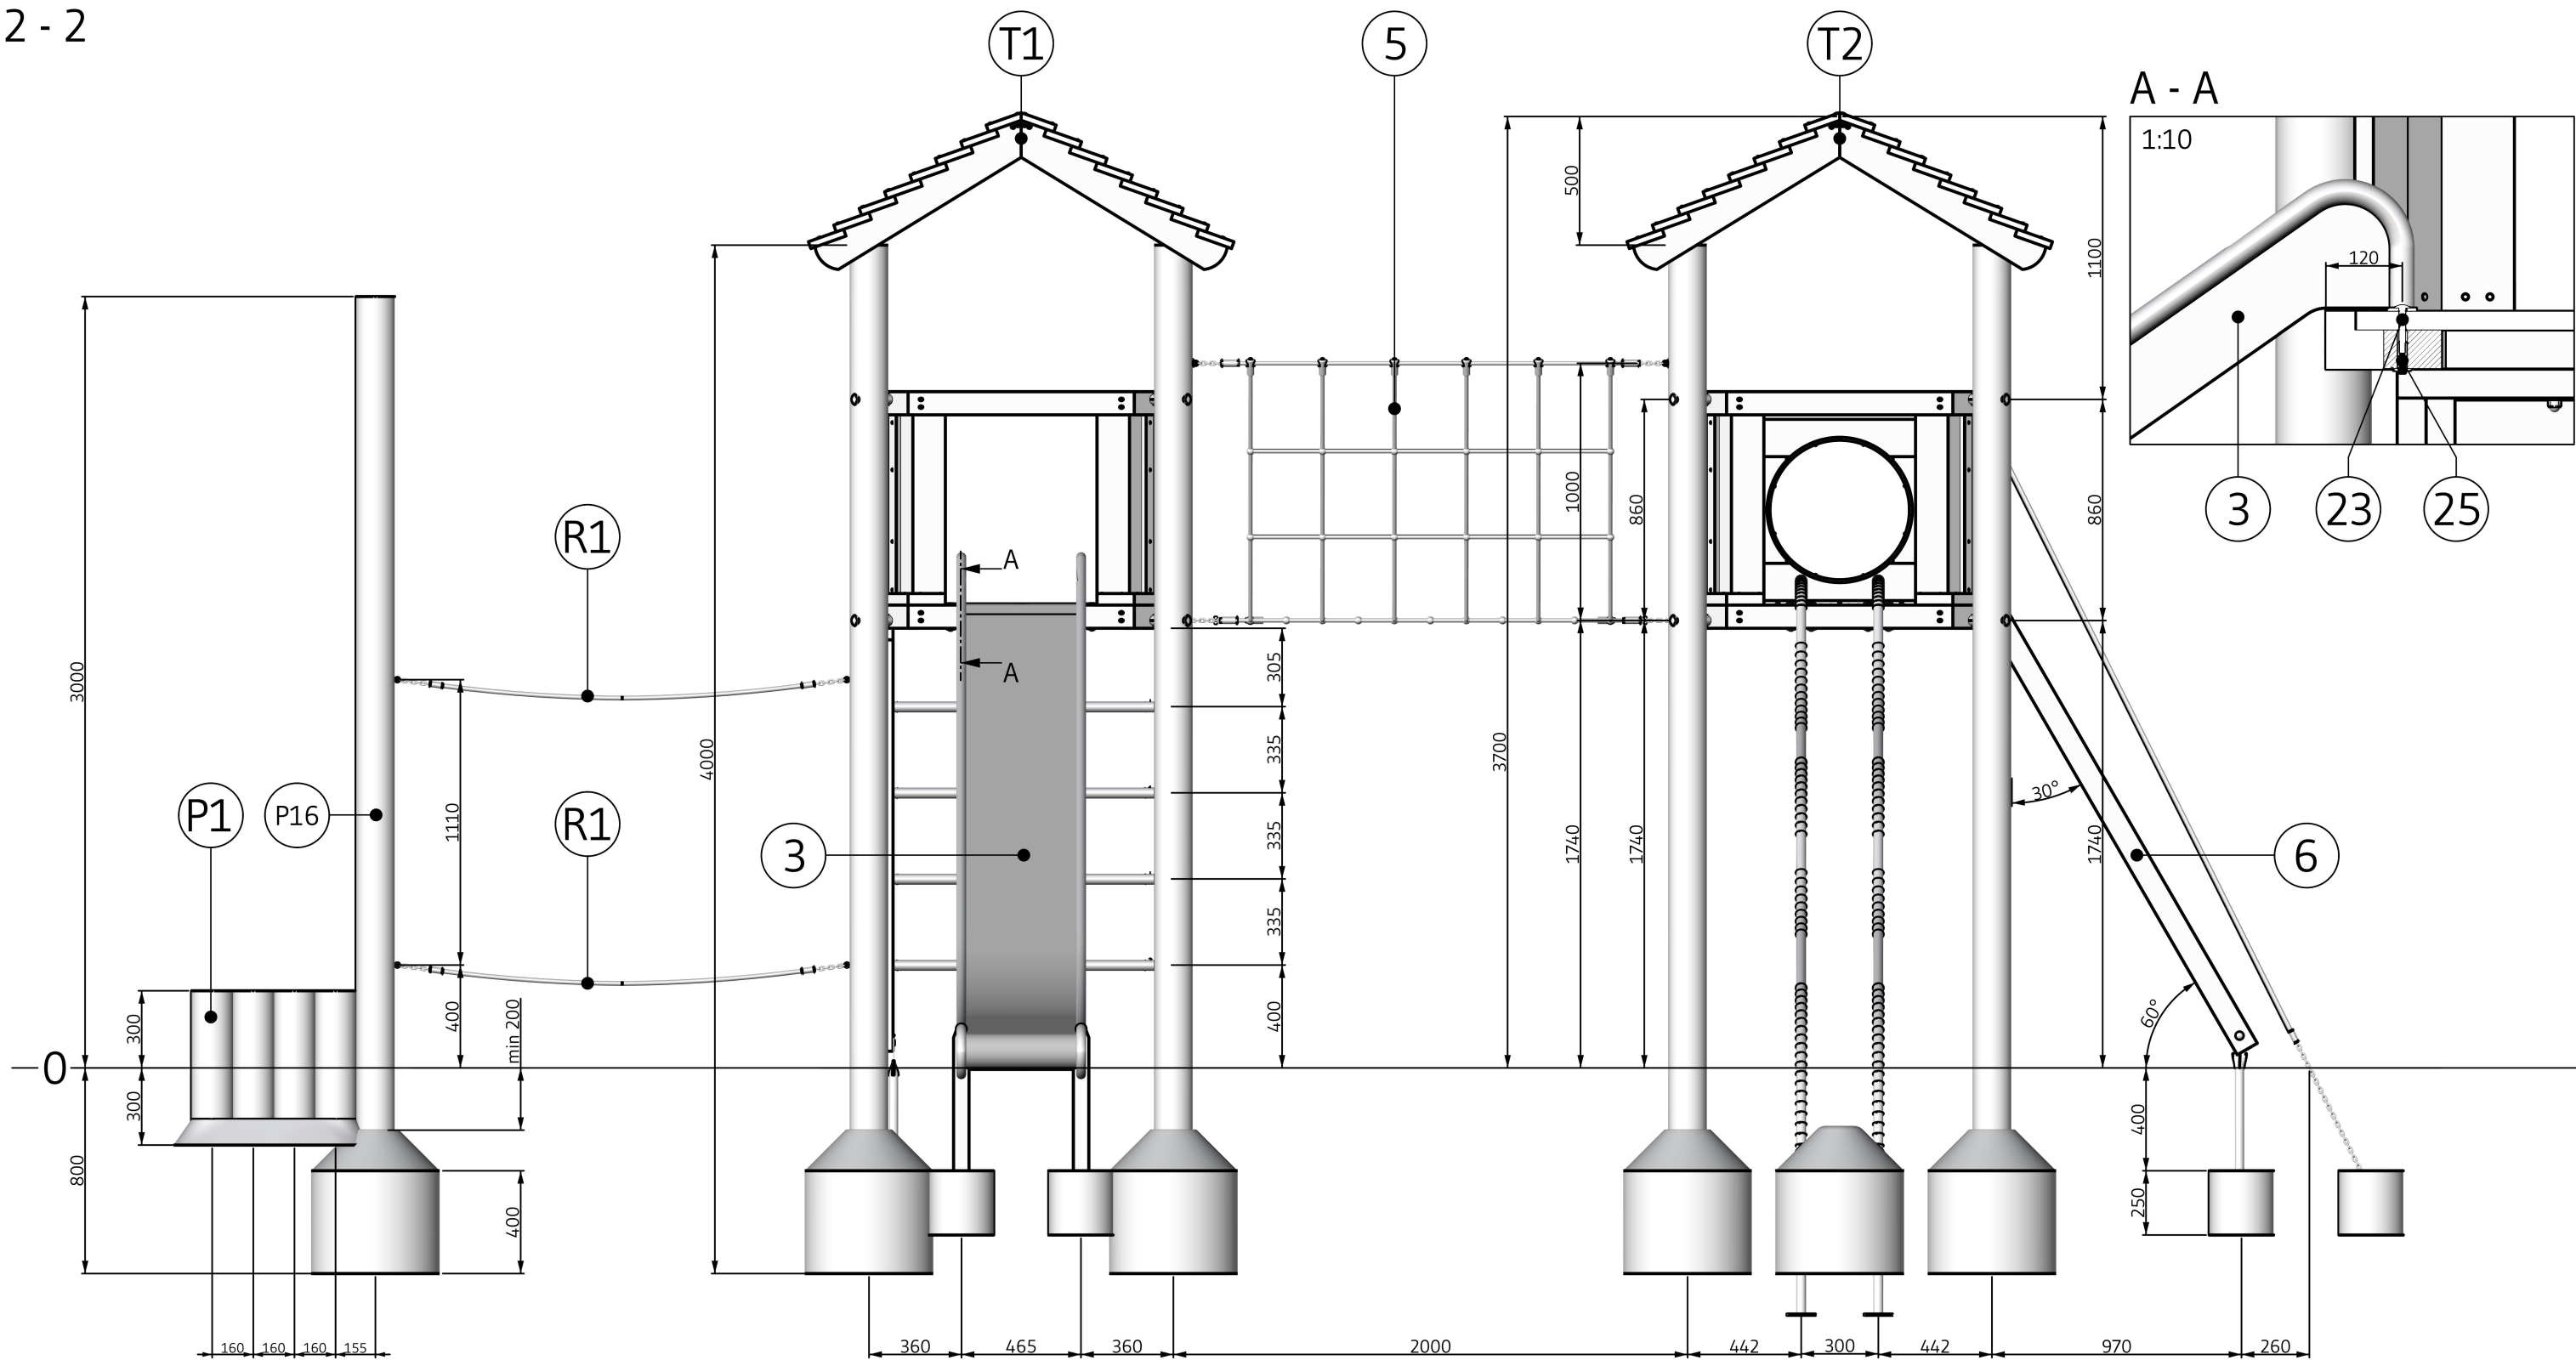


VIGTIGT: Hele anlægget skal samles før der støbes beton
IMPORTANT: The entire facility must be assembled before mould in concrete
WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
betoniert wird


4 - 4

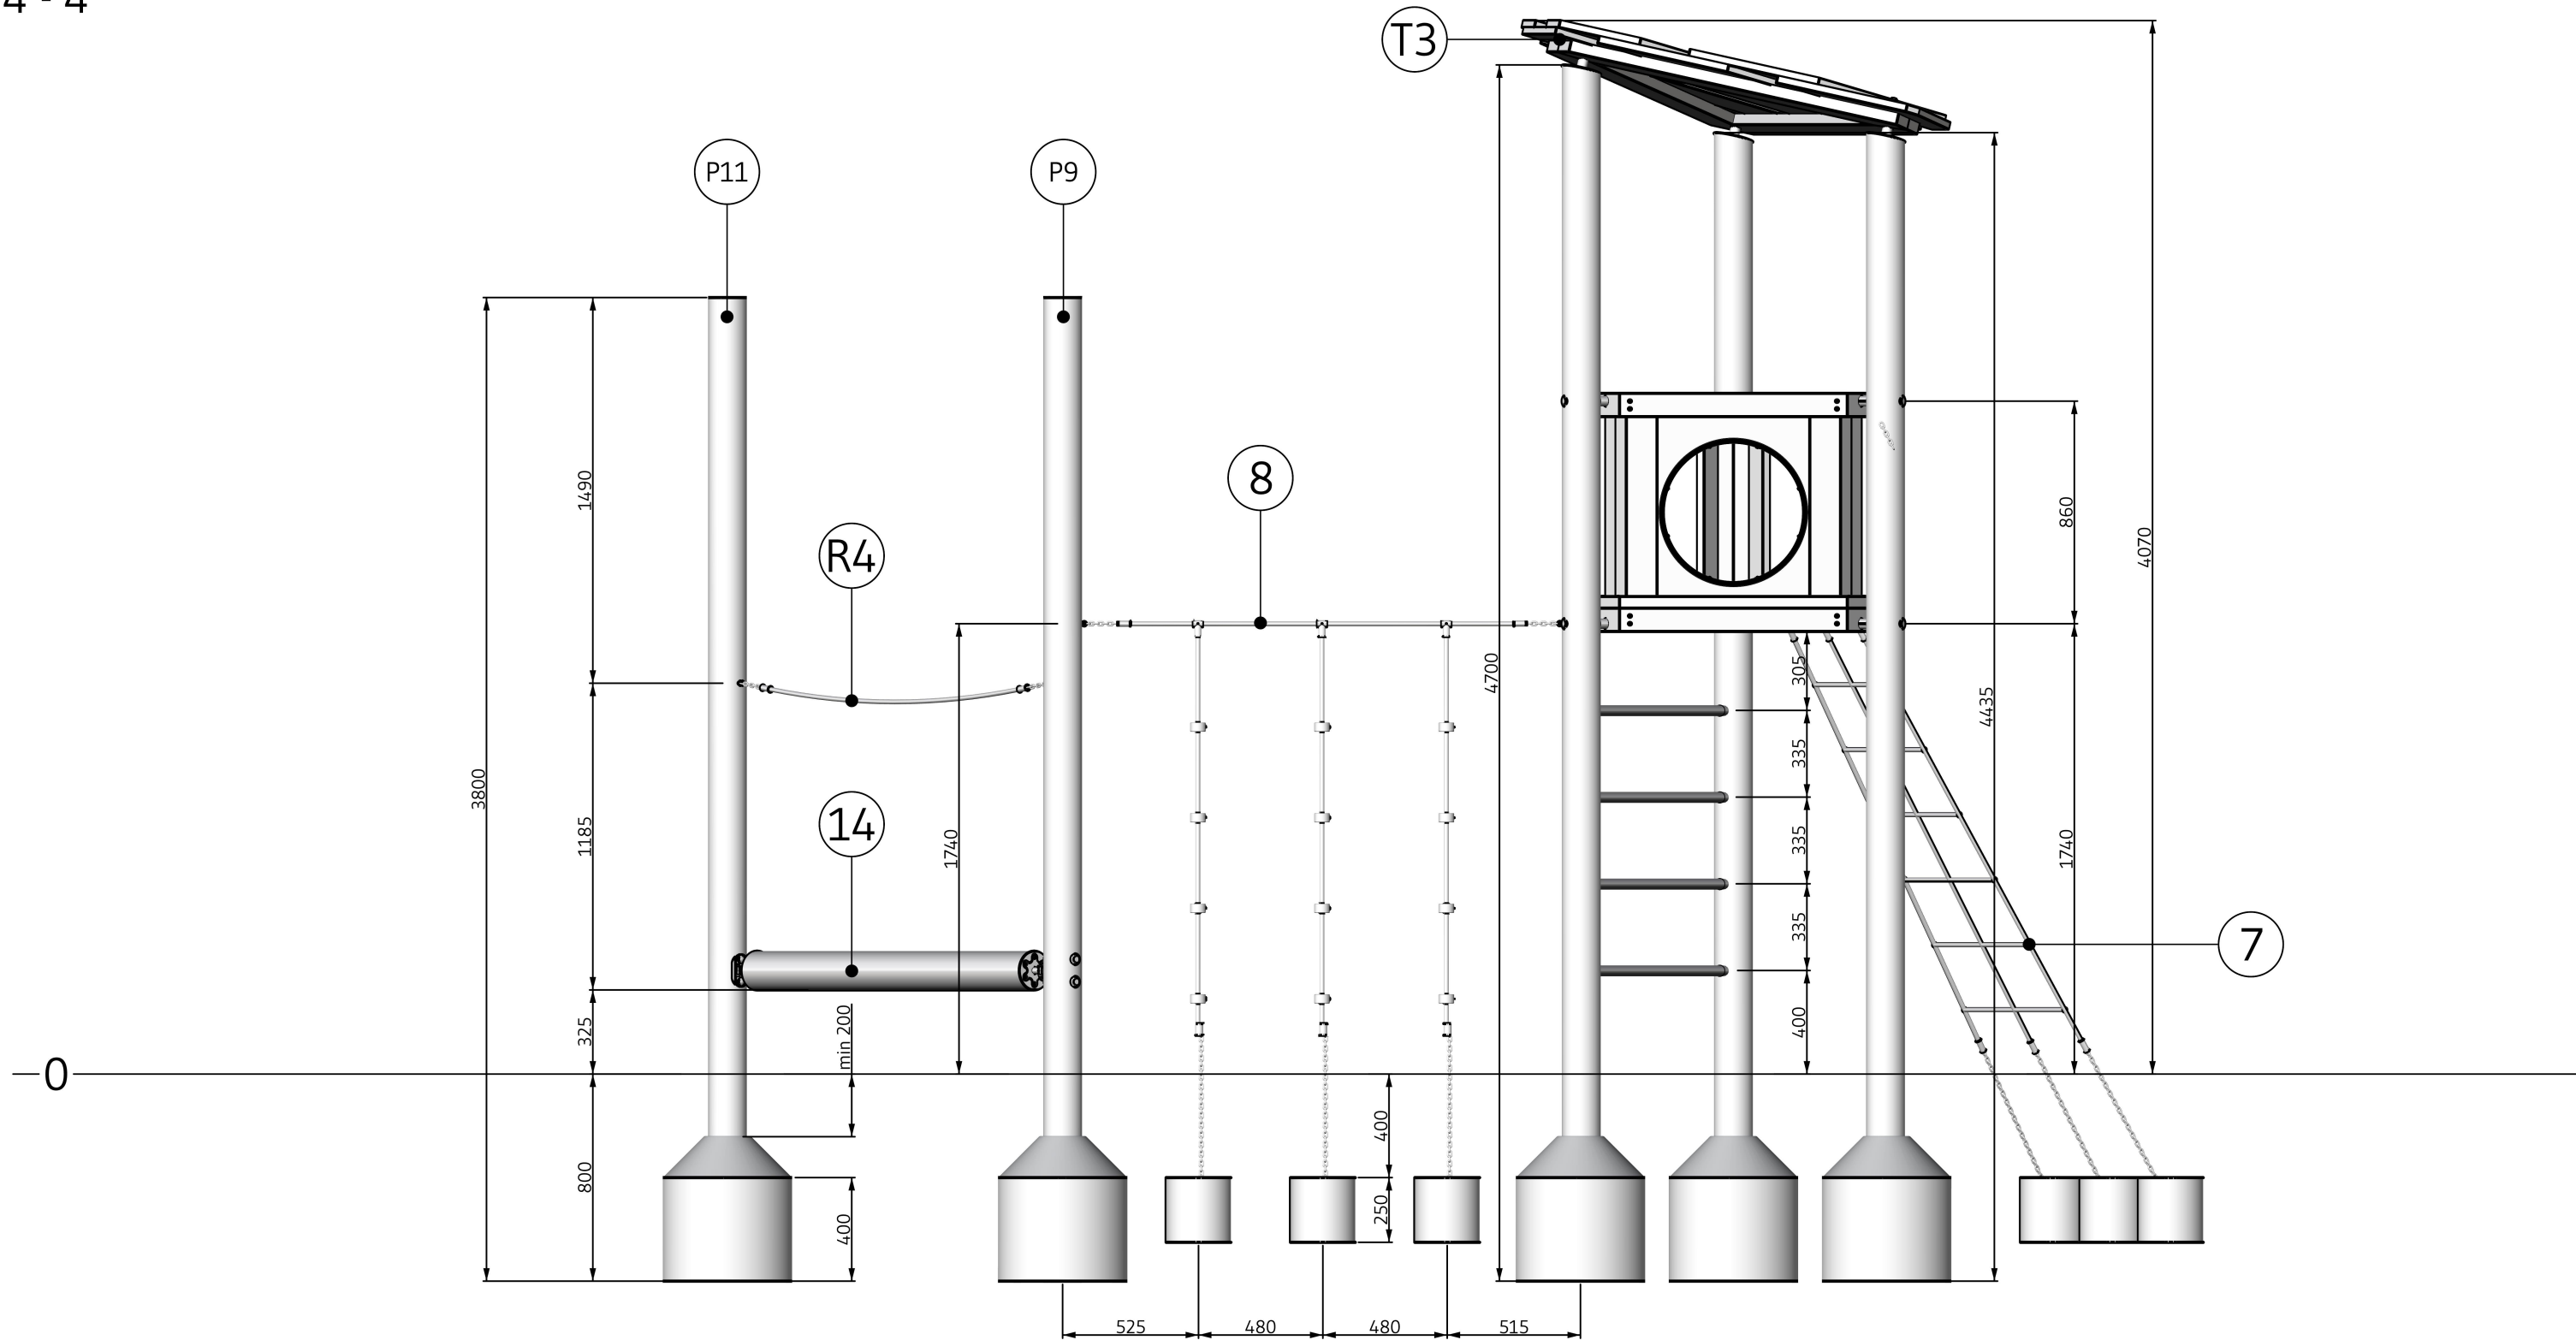

5 - 5

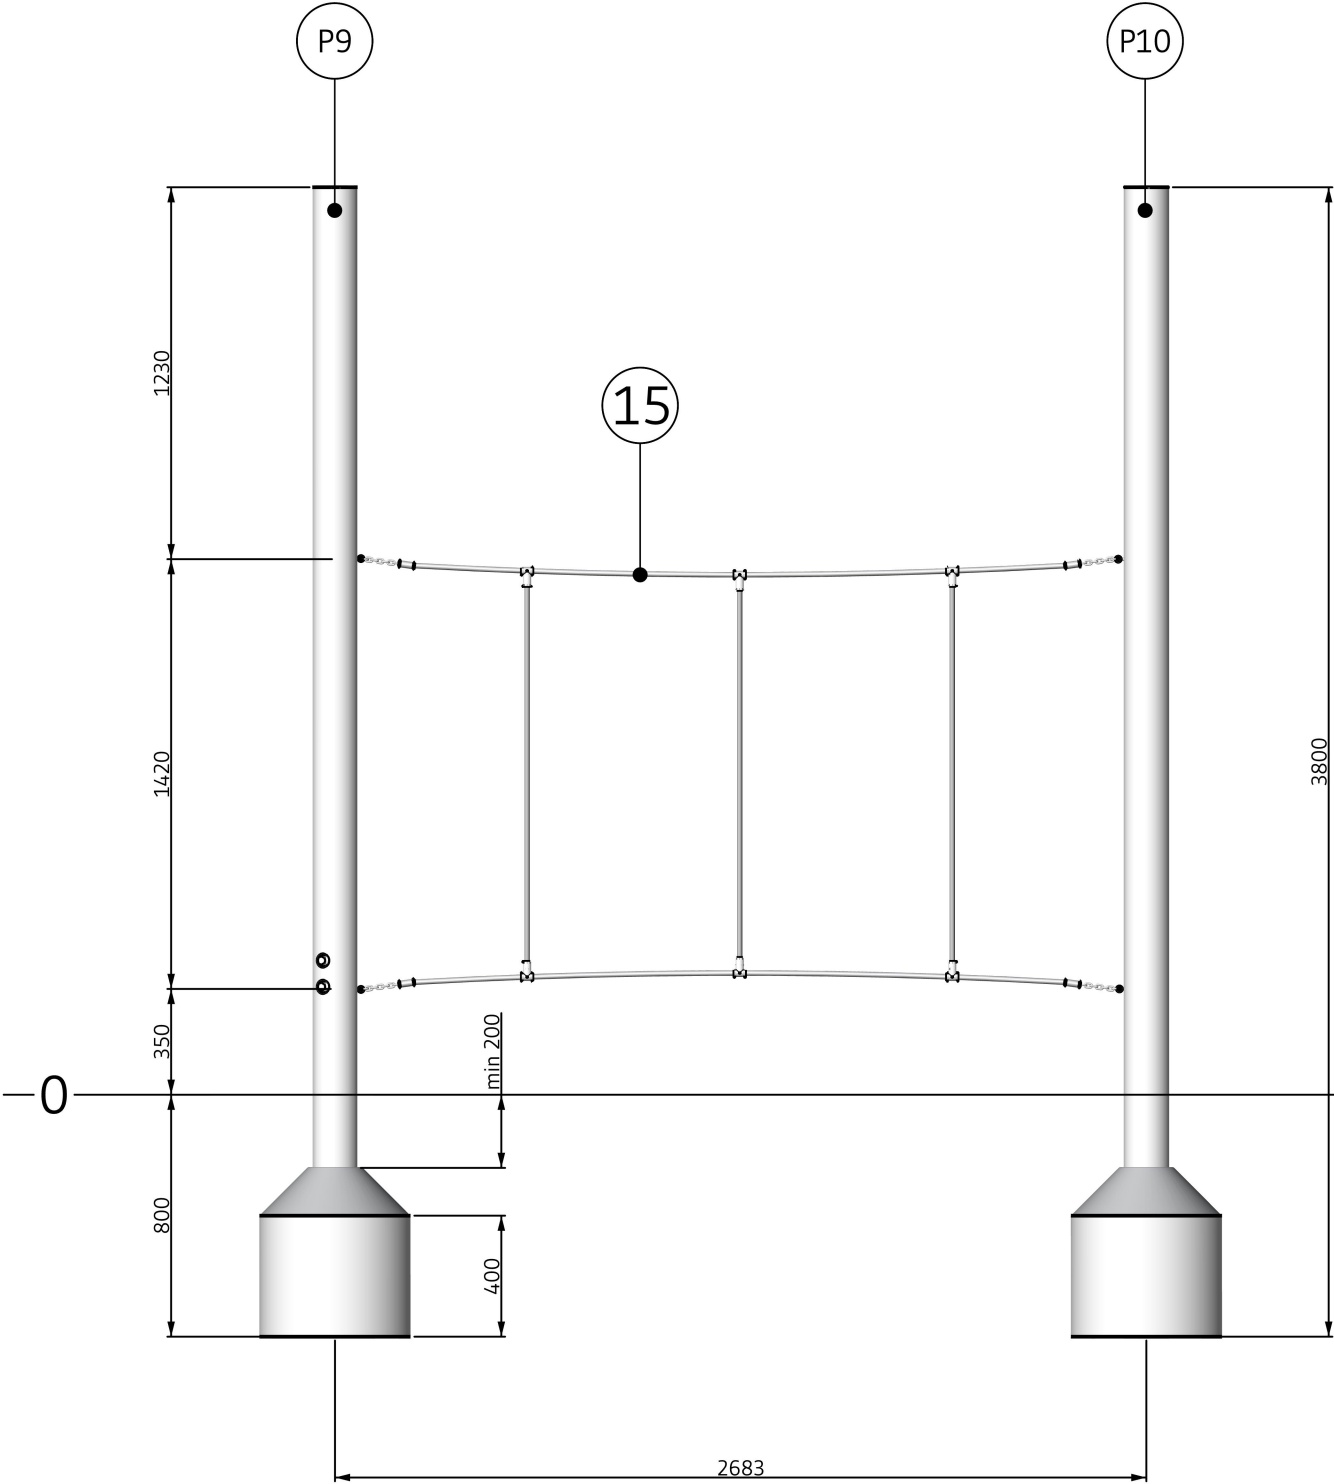

6 - 6

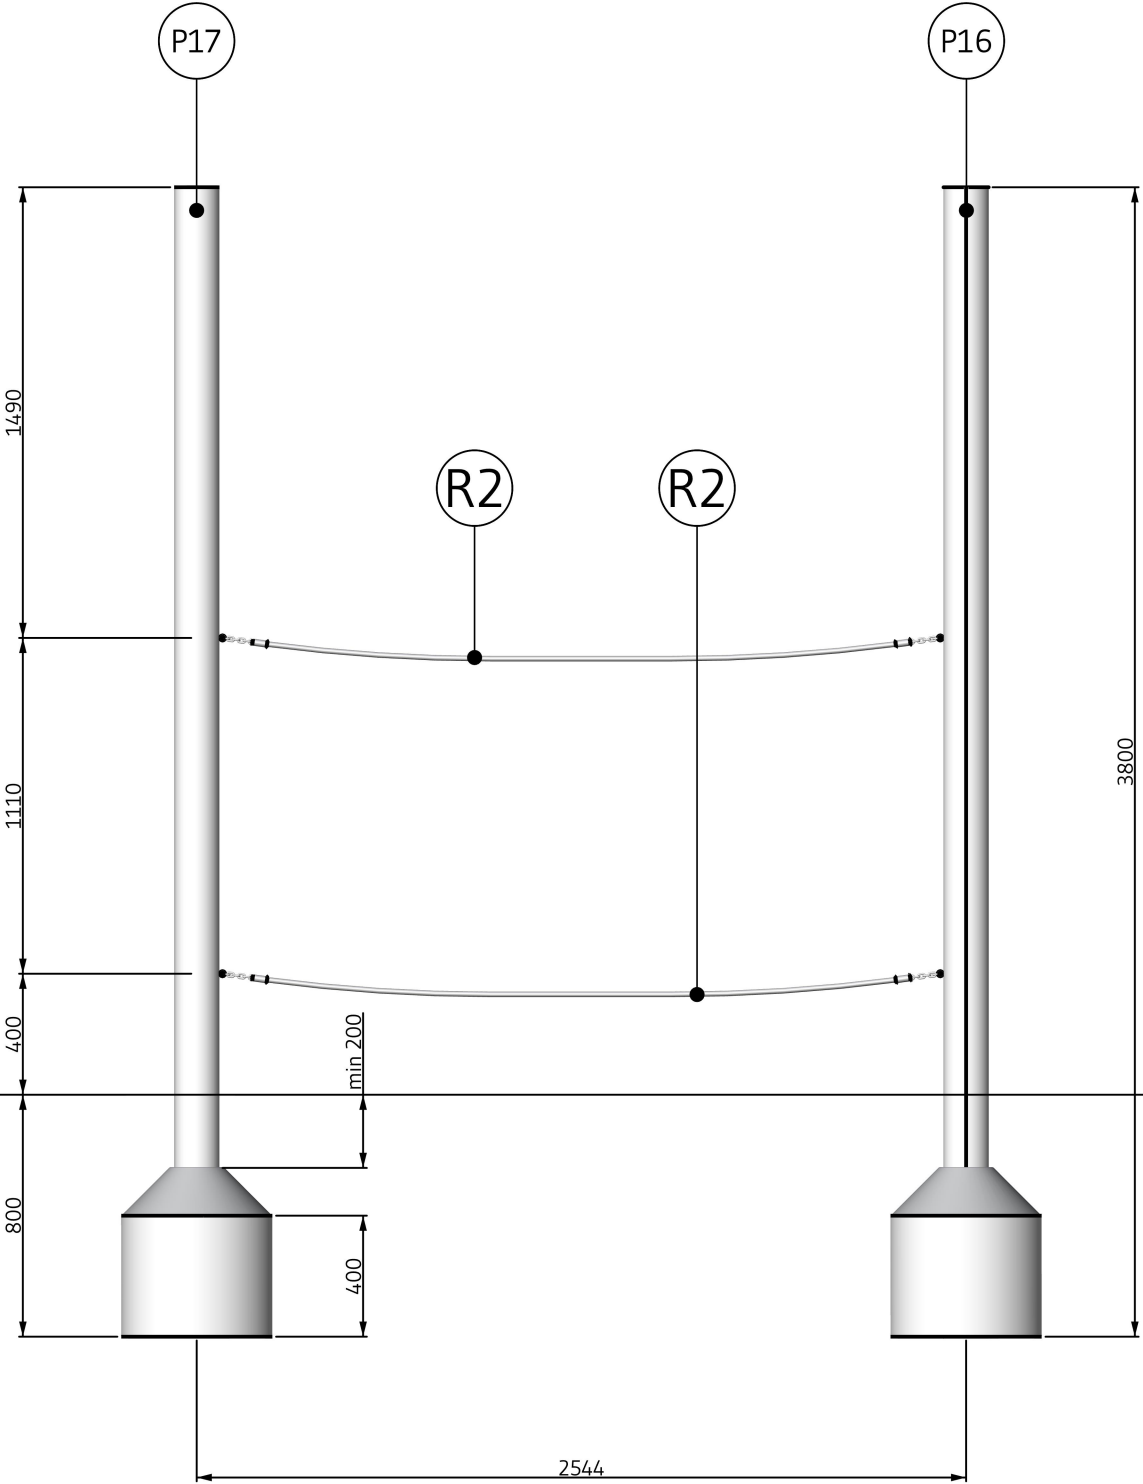


Mounting

Elverdal A/S ©



Elverdal

#	i	
1	P1	x16
	P9	x1
	P10	x1
	P11	x1
	P16	x1
	P17	x1
2	T1	x1
	T2	x1
	T3	x1
3	ORG15004XY	x1
4	ELV75400051	x1
5	HORG30015	x1
6	HORG30021	x1
7	HORG30020	x1
8	HORG30024	x1
9	HORG30023	x1
10	HORG30029	x1
11	R1	x2
	R2	x2
	R3	x3
	R4	x1
12	HORG30022	x1
13	HORG30025	x1
14	HORG30026	x1
15	HORG30027	x1
16	HORG30028	x1
17	ELV20080060	x16
18	ELV02080090	x4
19	HEX M10x120	x6
20	ELV30040080	x3
21	ELV30100100	x33
22	ELV15100100	x4
23	ELV10100070	x6
24	ELV10120120	x6
25	Barrel bolt?	x6
26	ELV95105025	x14
27	ELV92100000	x2
28	ELV90120000	x4
29	ORG5016A	x1

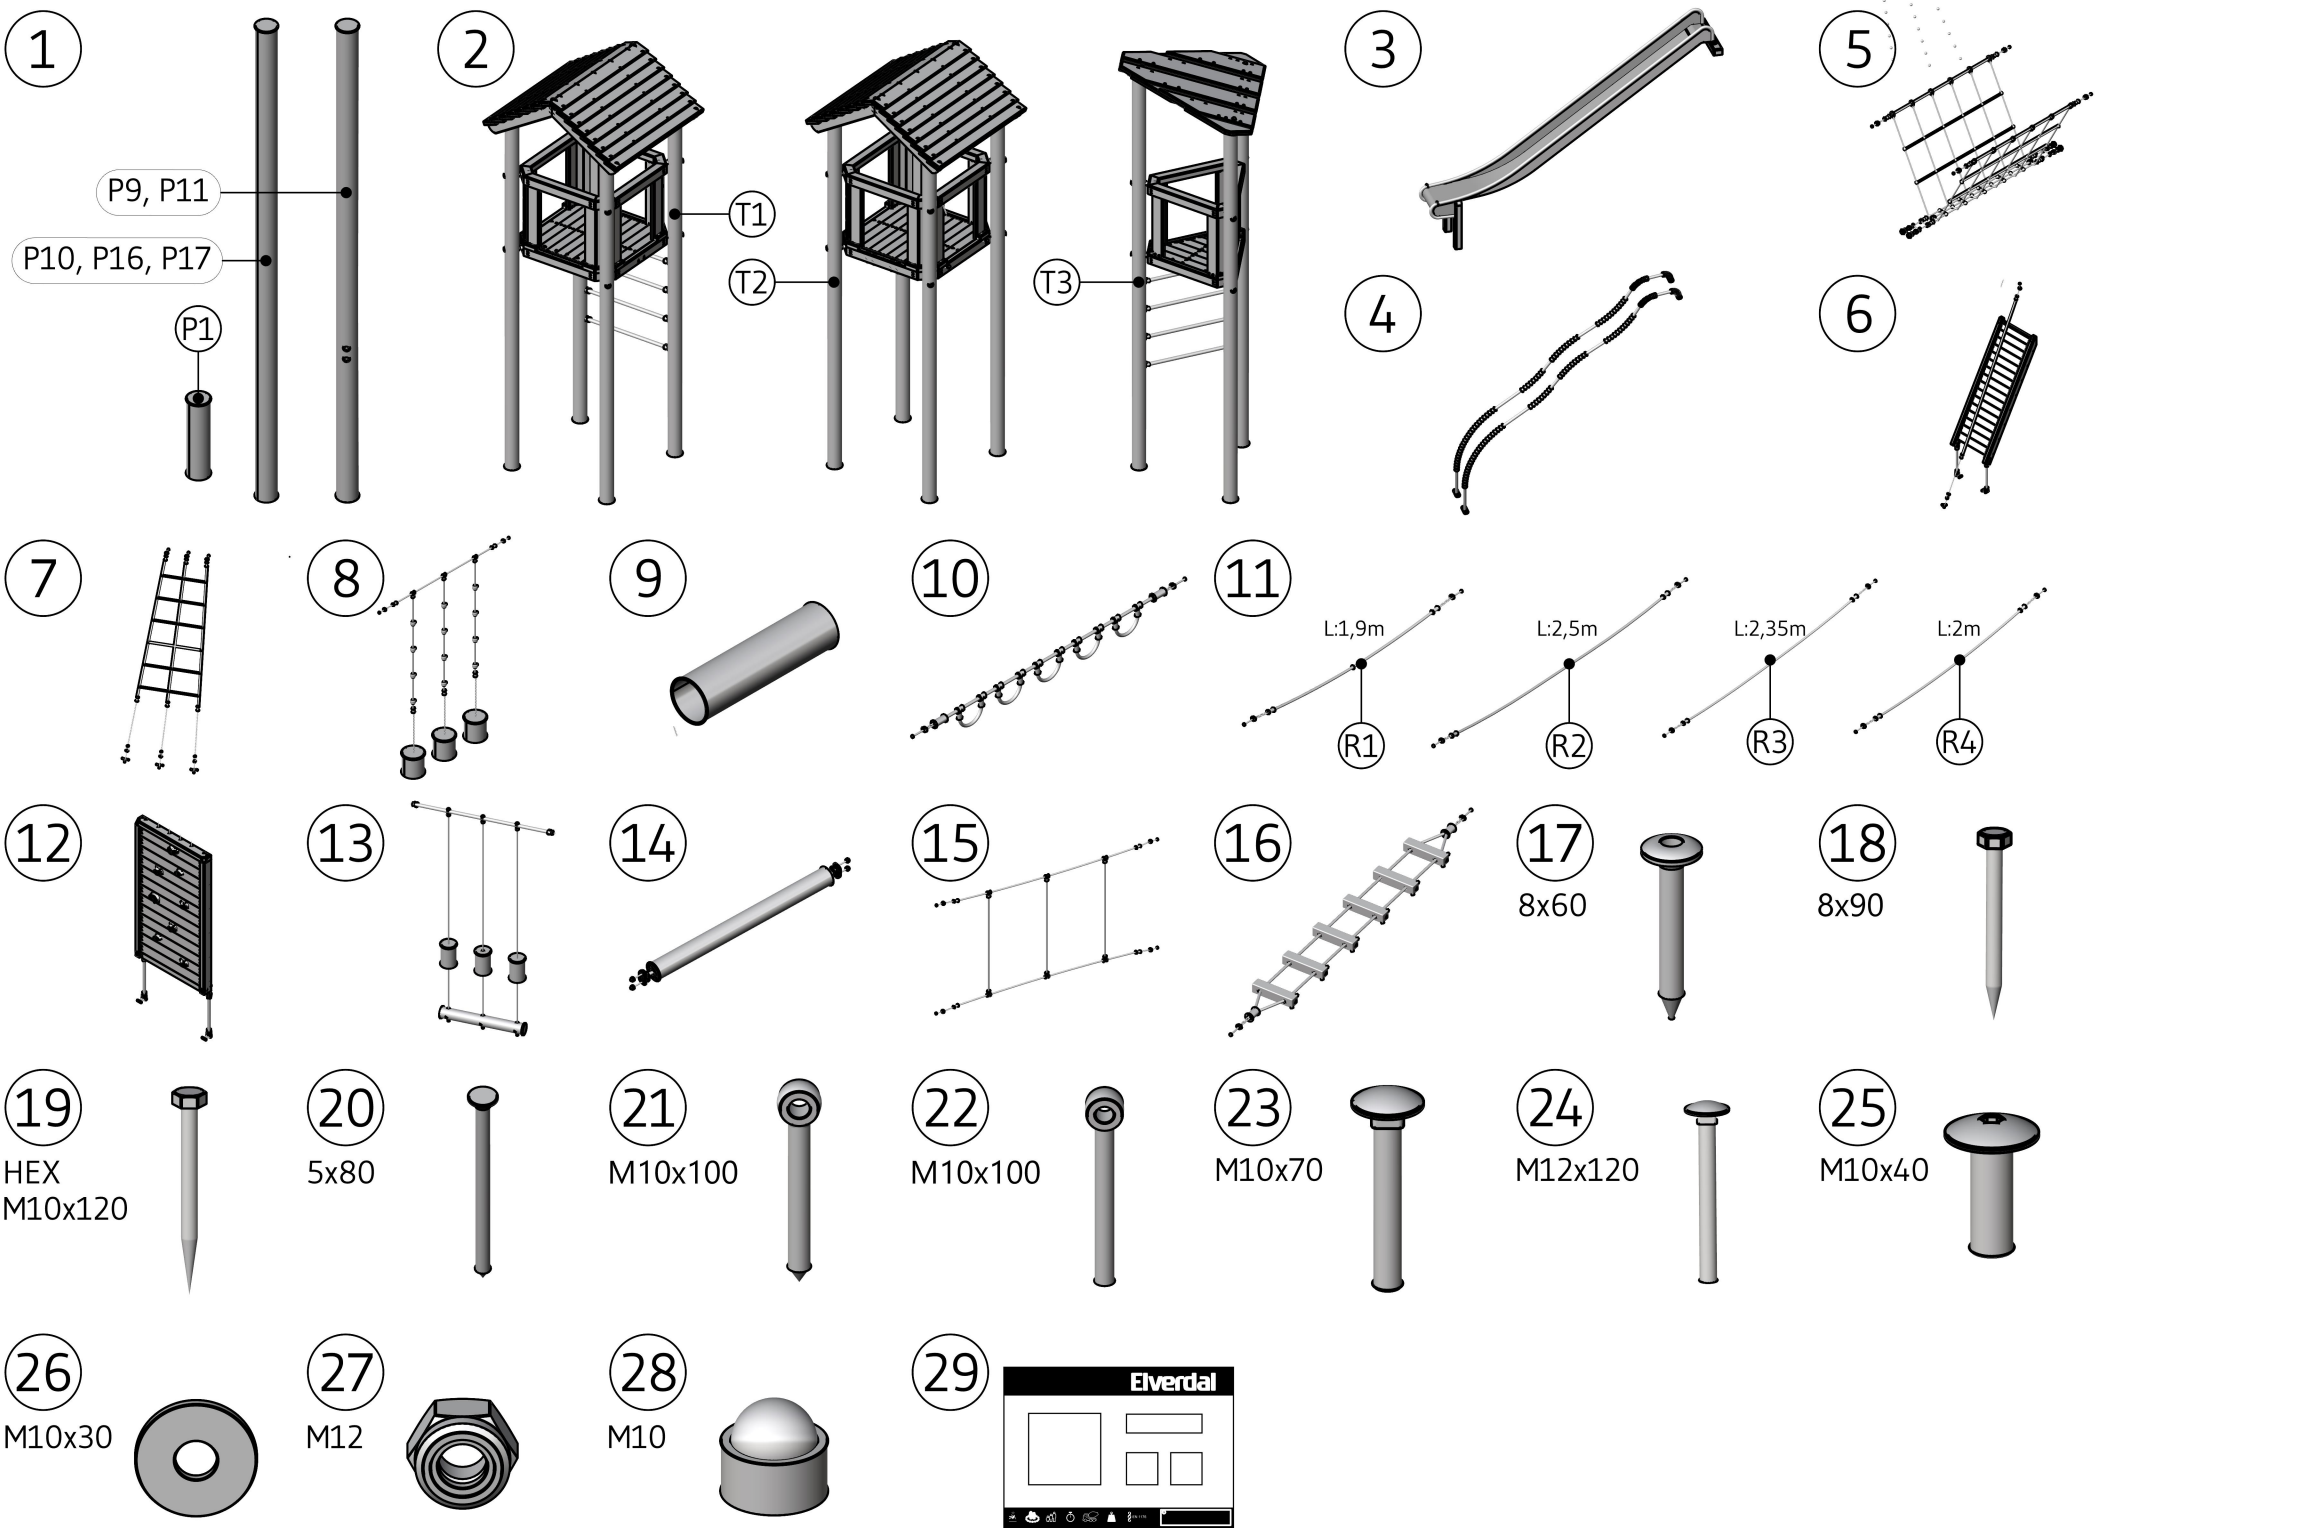

i

VIGTIGT: Hele anlægget skal samles før der støbes beton
IMPORTANT: The entire facility must be assembled before mould in concrete
WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
betoniert wird